


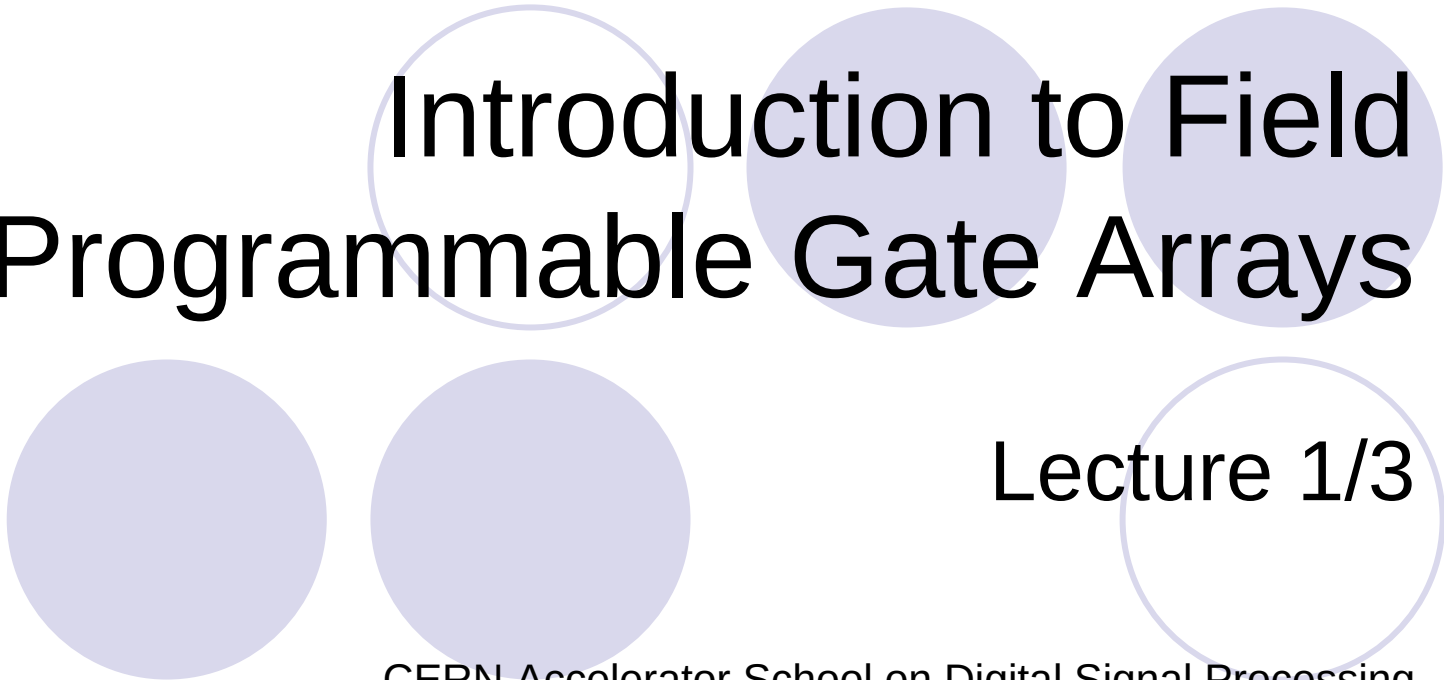

Introduction to Field Programmable Gate Arrays

Lecture 1/3

CERN Accelerator School on Digital Signal Processing

Sigtuna, Sweden, 31 May – 9 June 2007

Javier Serrano, CERN AB-CO-HT

Outline



- Historical introduction.
- Basics of digital design.
- FPGA structure.
- Traditional (HDL) design flow.
- Demo.


Outline



- Historical introduction.
- Basics of digital design.
- FPGA structure.
- Traditional (HDL) design flow.
- Demo.



Historical Introduction

- In the beginning, digital design was done with the '74 series of chips.
- Some people would design their own chips based on Gate Arrays, which were nothing else than an array of NAND gates:

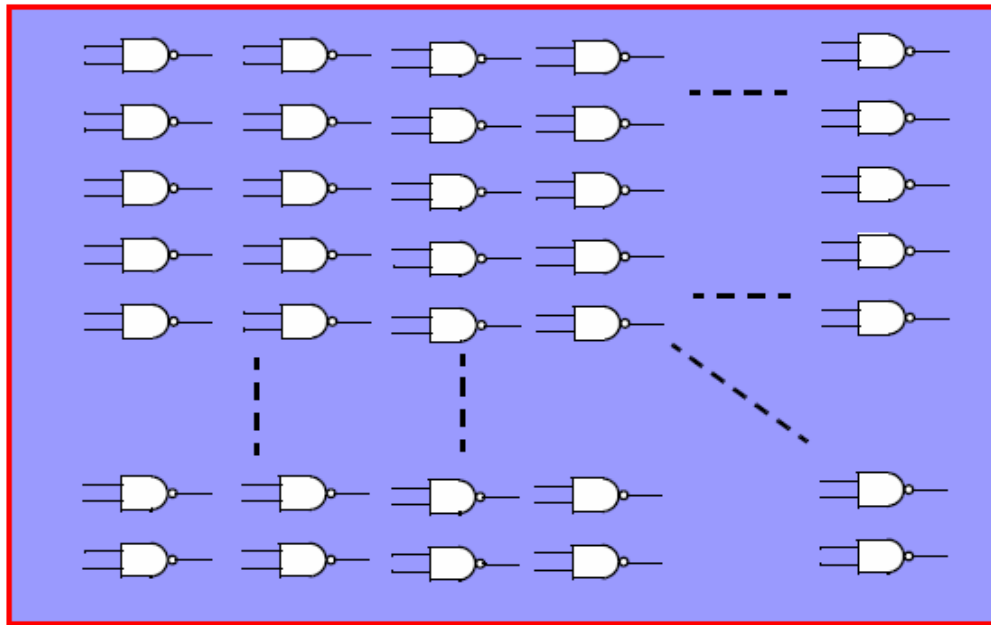


Historical Introduction

- The first programmable chips were PLAs (Programmable Logic Arrays): two level structures of AND and OR gates with user programmable connections.
- Programmable Array Logic devices were an improvement in structure and cost over PLAs. Today such devices are generically called Programmable Logic Devices (PLDs).

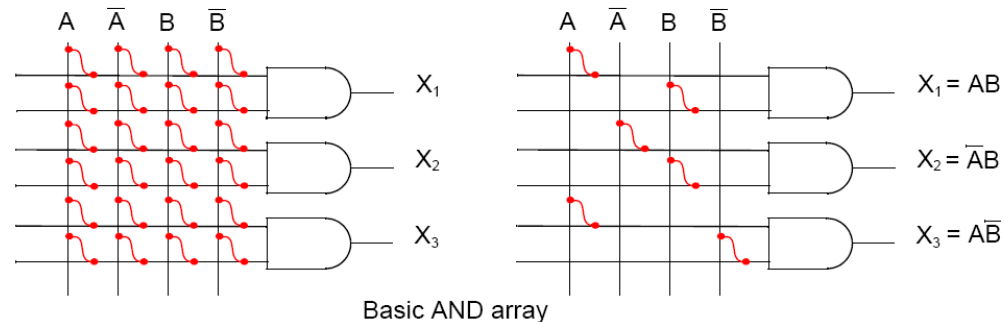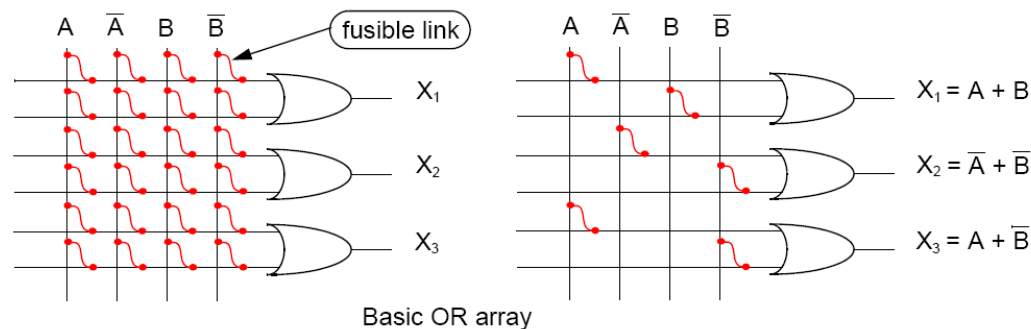

Historical introduction

- A complex PLD (CPLD) is nothing else than a collection of multiple PLDs and an interconnection structure.
- Compared to a CPLD, a Field Programmable Gate Array (FPGA) contains a much larger number of smaller individual blocks + large interconnection structure that dominates the entire chip.

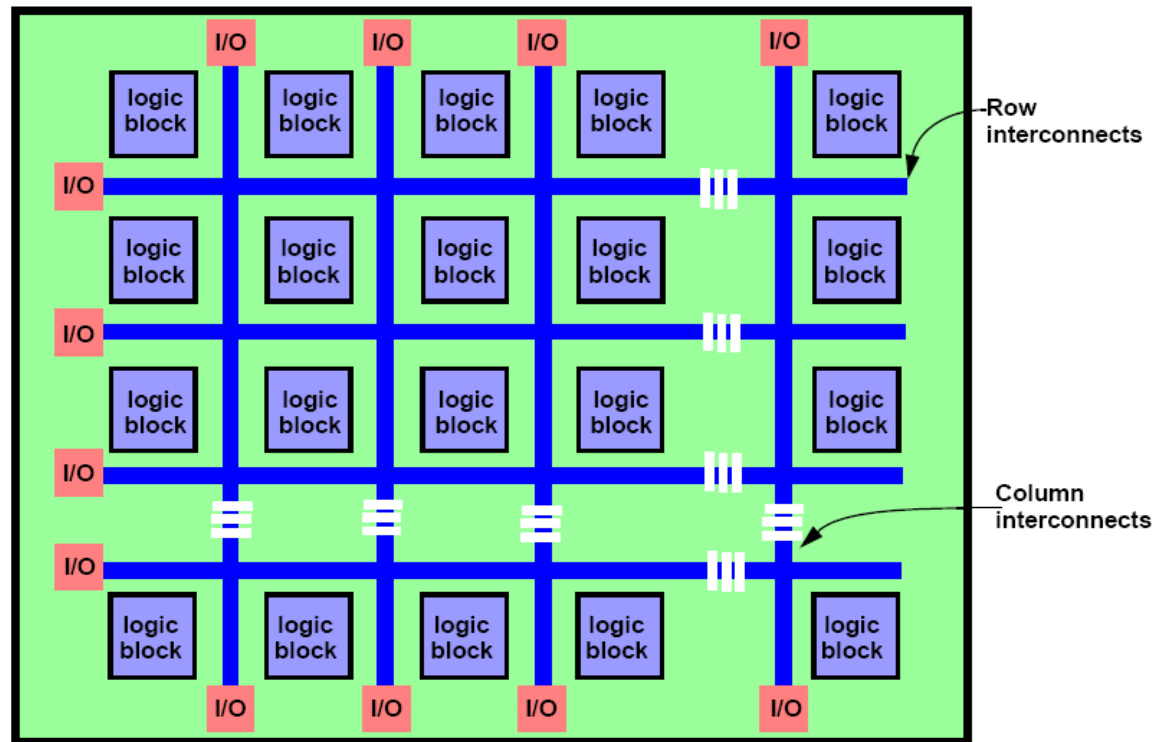


Outline




- Historical introduction.
- Basics of digital design.
- FPGA structure.
- Traditional (HDL) design flow.
- Demo.

Basics of digital design

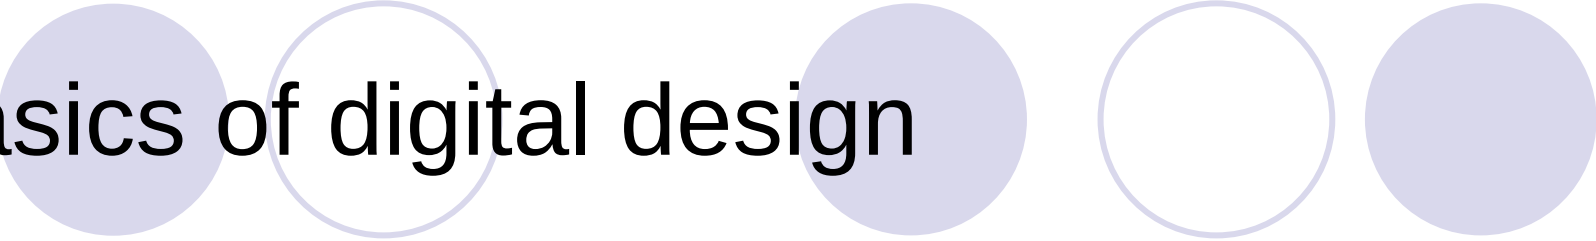


- Unless you really know what you are doing, stick to synchronous design: sandwiching bunches of combinational logic in between flip flops.
- Combinational logic: state of outputs depend on current state of inputs alone (forgetting about propagation delays for the time being). E.g. AND, OR, mux, decoder, adder...
- D-type Flip flops propagate D to Q upon a rising edge in the clk input.
- Synchronous design simplifies design analysis, which is good given today's logic densities.

Don't do this!

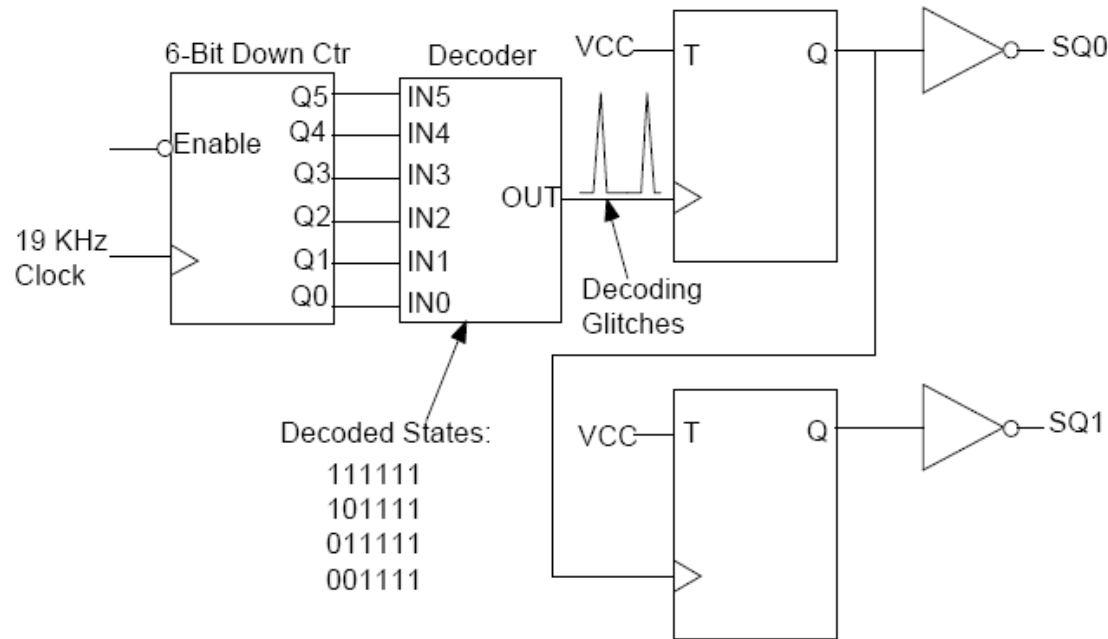


Toggle flip-flops get triggered by glitches produced by different path lengths of counter bits.

Basics of (synchronous) Digital Design

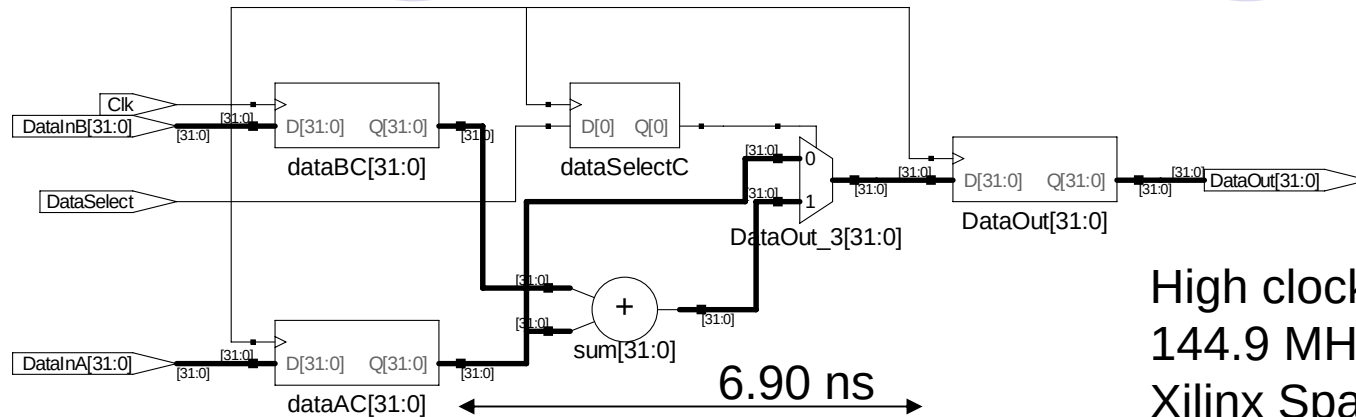

High clock rate:
144.9 MHz on a
Xilinx Spartan IIE.

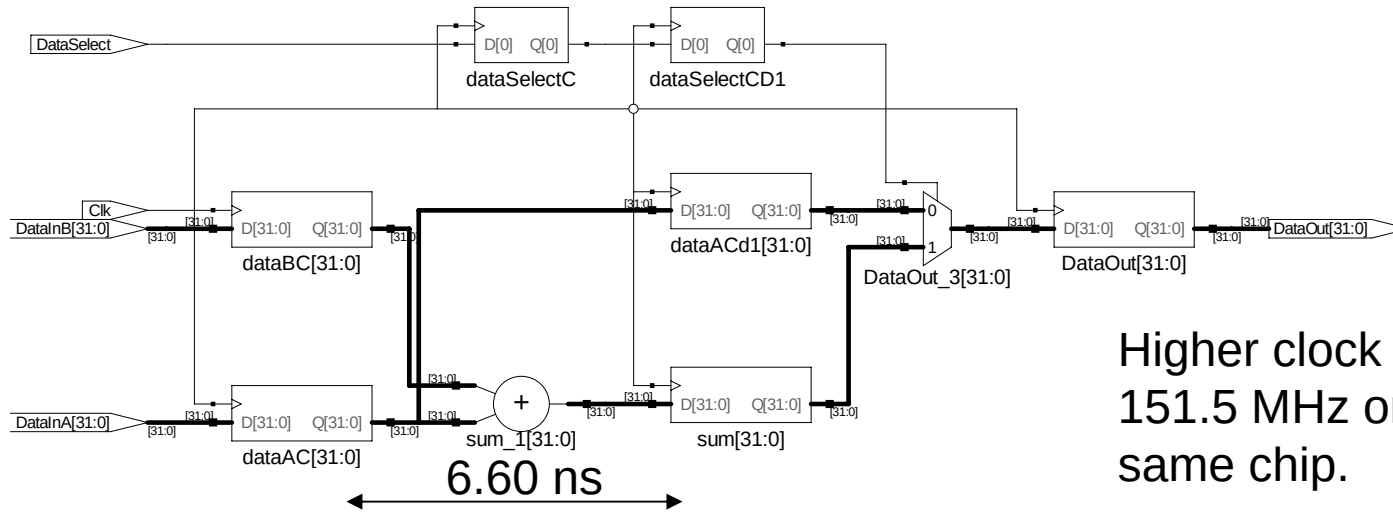

Higher clock rate:
151.5 MHz on the
same chip.


Illustrating the latency/throughput tradeoff

Outline





- Historical introduction.
- Basics of digital design.
- **FPGA structure.**
- Traditional (HDL) design flow.
- Demo.

Basic FPGA architecture

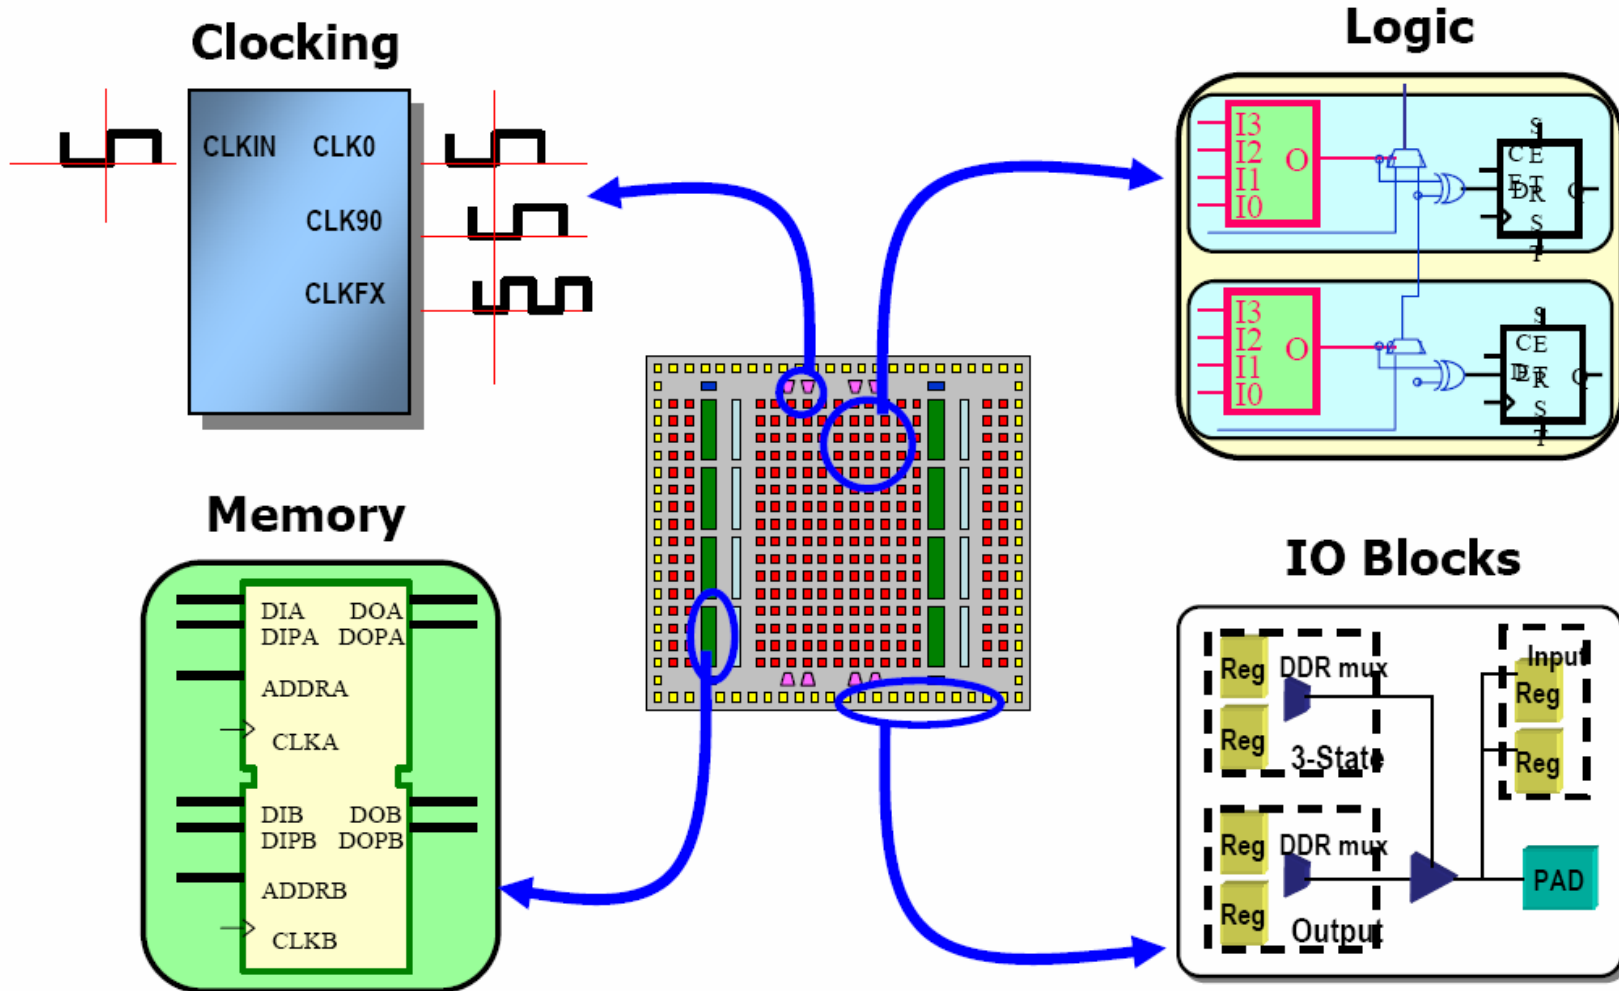


The logic block: a summary view

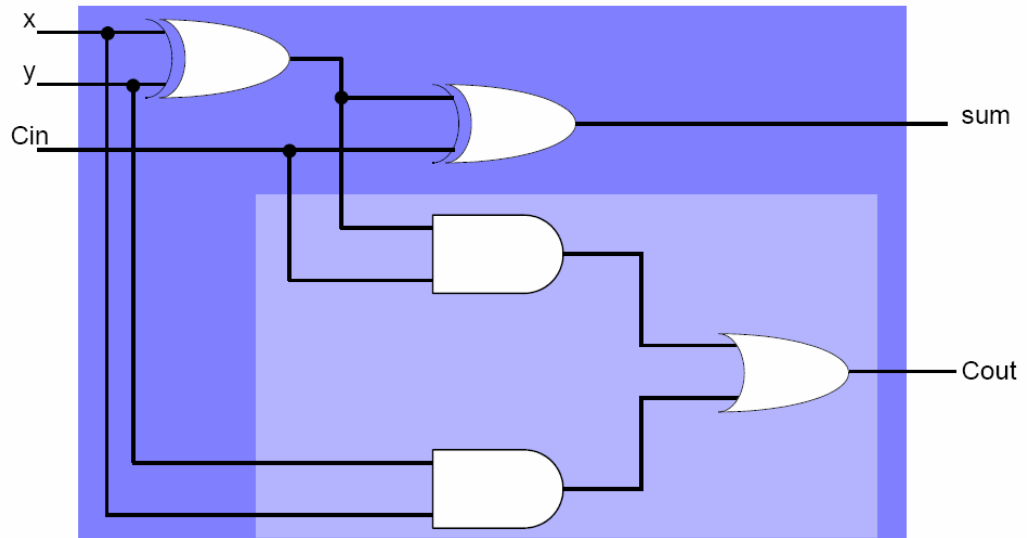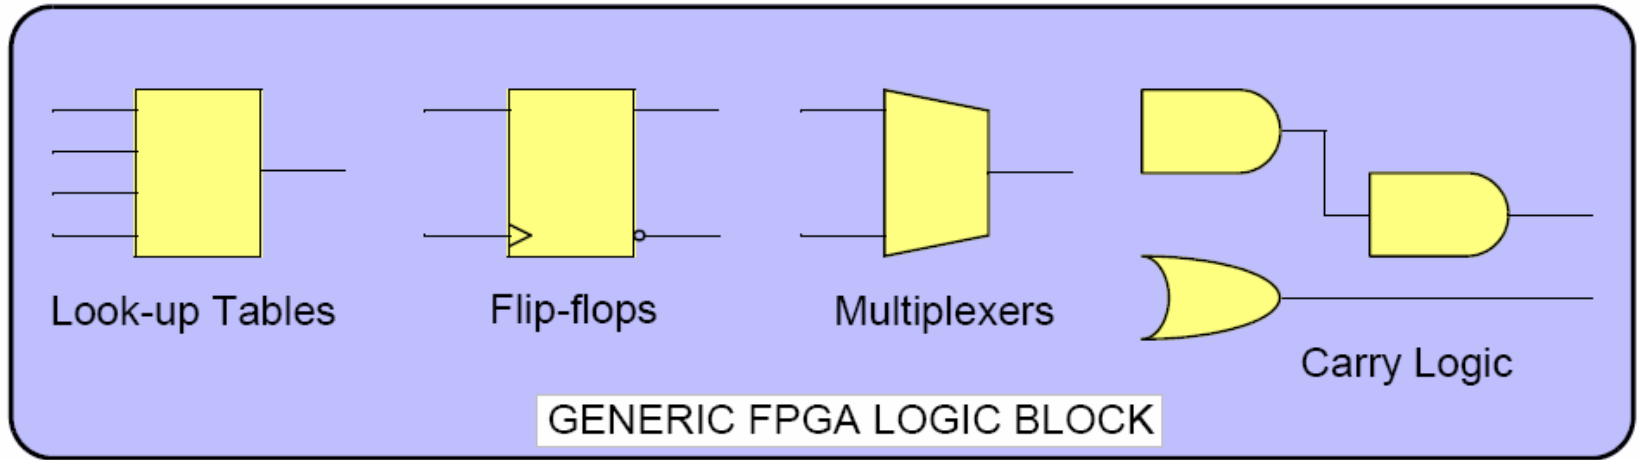


Example: using a LUT as a full adder.


A practical example: Xilinx Virtex II Pro family (used in the lab)

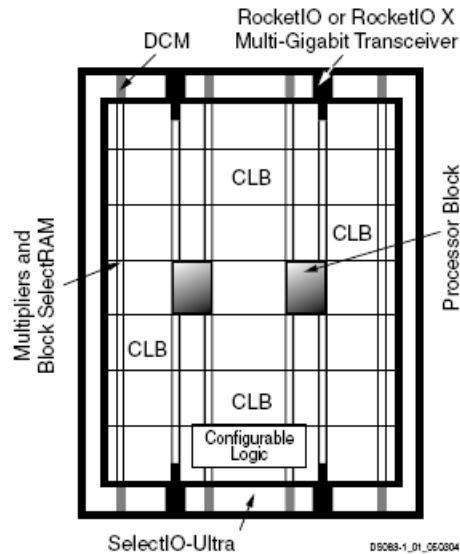


Overview

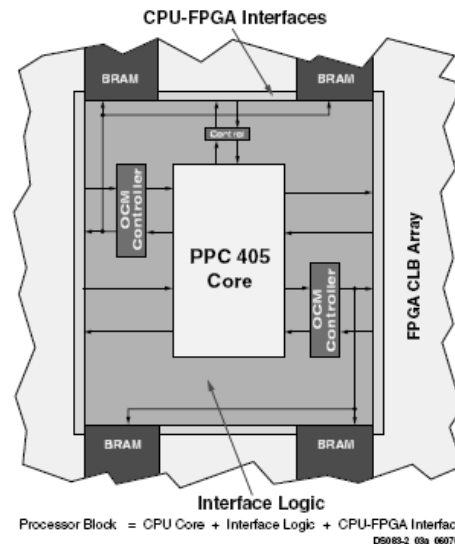

Embedded PowerPC

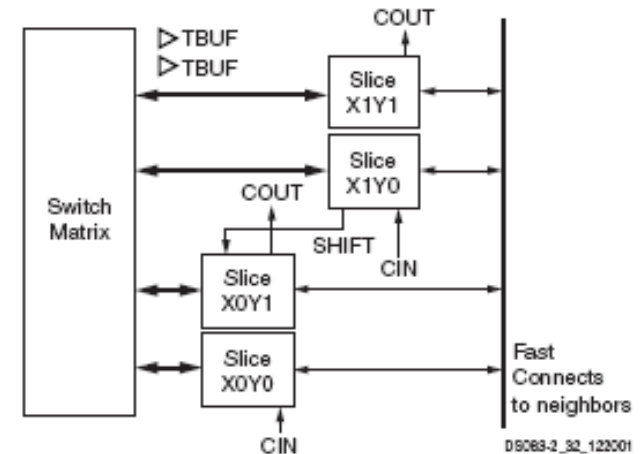


Configurable Logic Block (CLB)

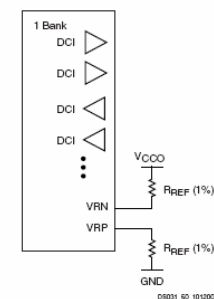


Digitally Controlled Impedance (DCI)

A practical example: Xilinx Virtex II Pro family



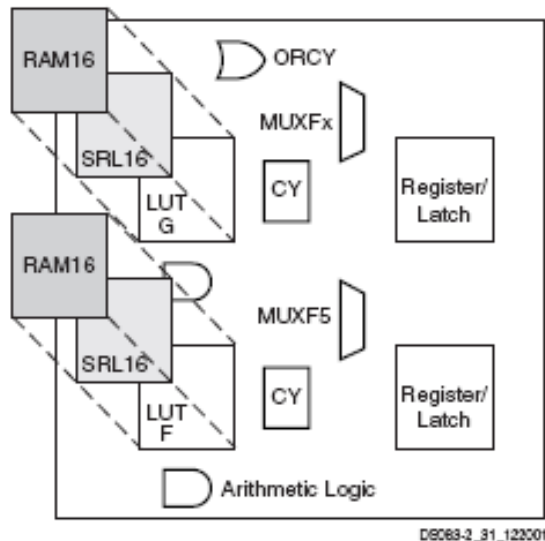


Slice

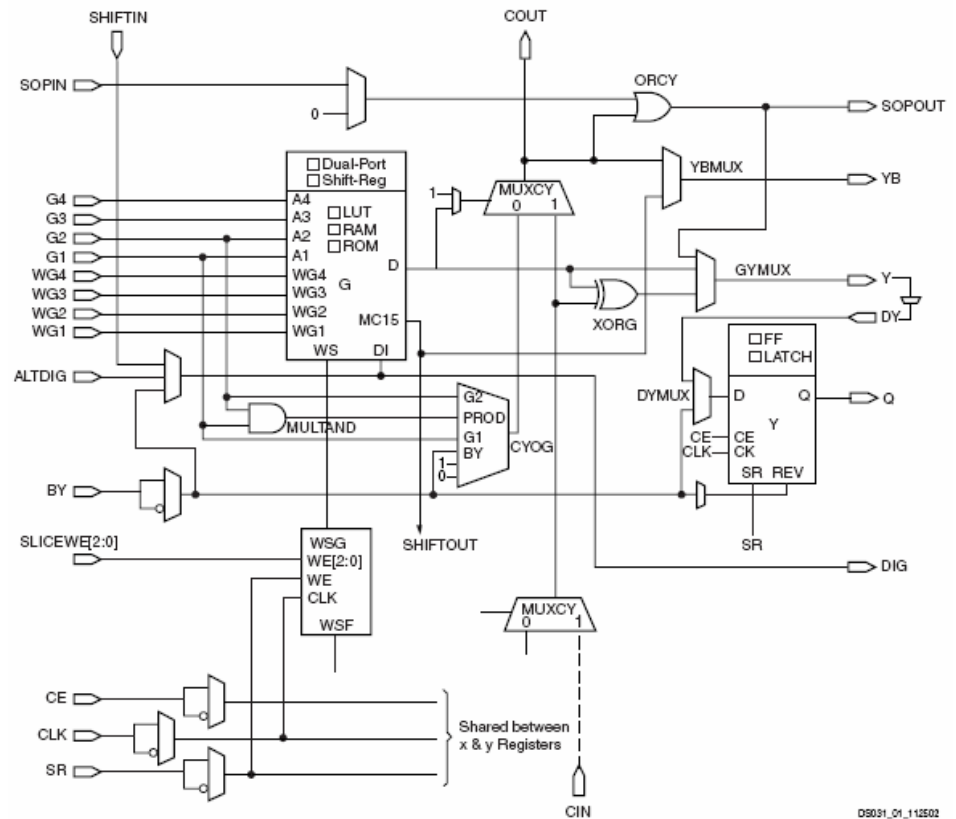

Detail of half-slice


A practical example: Xilinx Virtex II Pro family

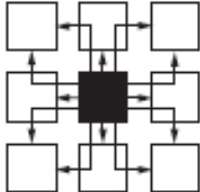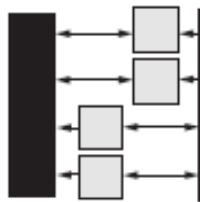24 Horizontal Long Lines 24 Vertical Long Lines	
120 Horizontal Hex Lines 120 Vertical Hex Lines	
40 Horizontal Double Lines 40 Vertical Double Lines	
16 Direct Connections (total in all four directions)	
8 Fast Connects	

DS031_60_110200


Routing resources

FPGA state of the art

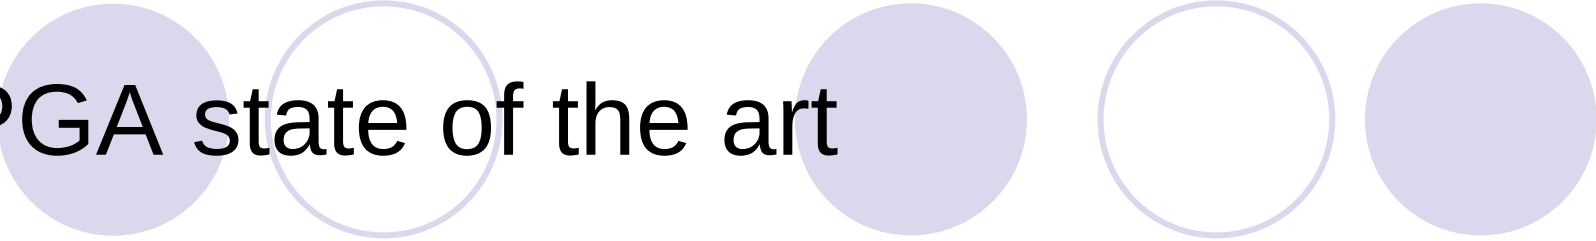


- In addition to logic gates and routing, in a modern FPGA you can find:
 - Embedded processors (soft or hard).
 - Multi-Gb/s transceivers with equalization and hard IP for serial standards as PCI Express and Gbit Ethernet.
 - Lots of embedded MAC units, with enough bits to implement single precision floating point arithmetic efficiently.
 - Lots of dual-port RAM.
 - Sophisticated clock management through DLLs and PLLs.
 - System monitoring infrastructure including ADCs.
 - On-substrate decoupling capacitors to ease PCB design.
 - Digitally Controlled Impedance to eliminate on-board termination resistors.

Embedded processors


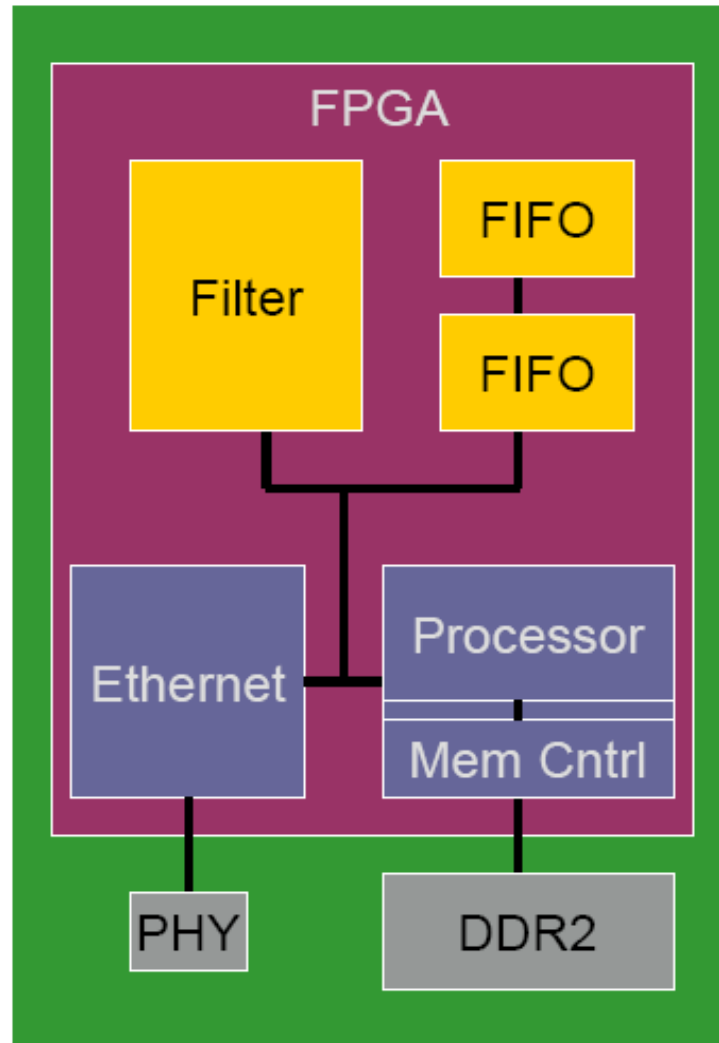


Why use embedded processors?

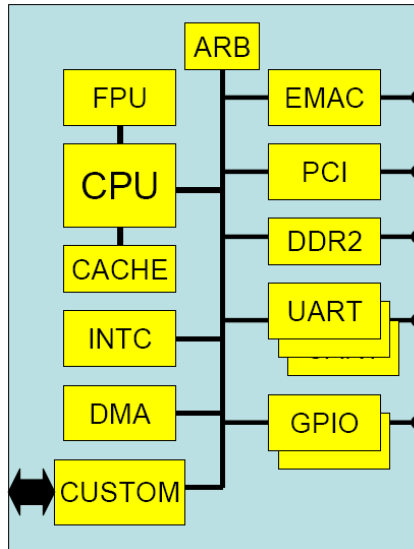


Customization: take only the peripherals you need and replicate them as many times as needed. Create your own custom peripherals.

Performing some software tasks in hardware can be expensive

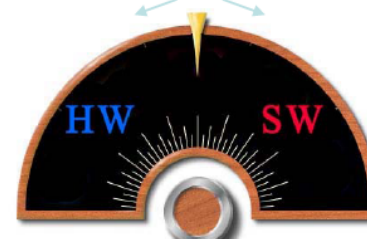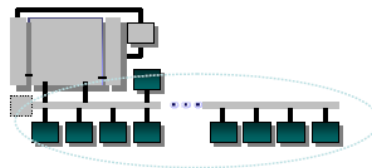


Performing some hardware tasks in software can be slow

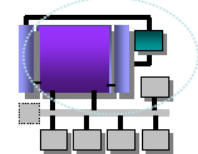


Strike optimum balance in system partitioning.

Serial signaling

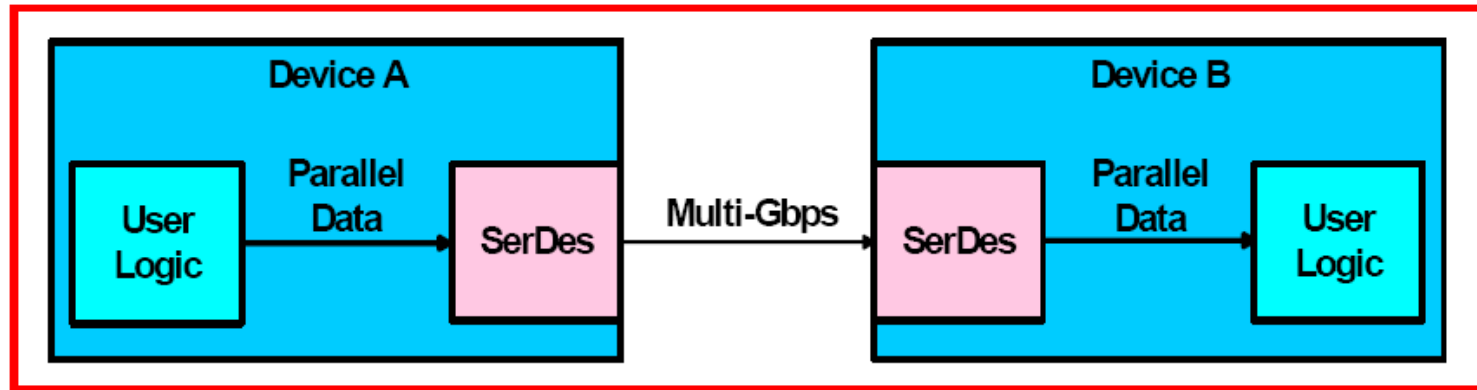

- Avoids clock/data skew by using embedded clock.
- Reduces EMI and power consumption.
- Simplifies PCB routing.

Clock management

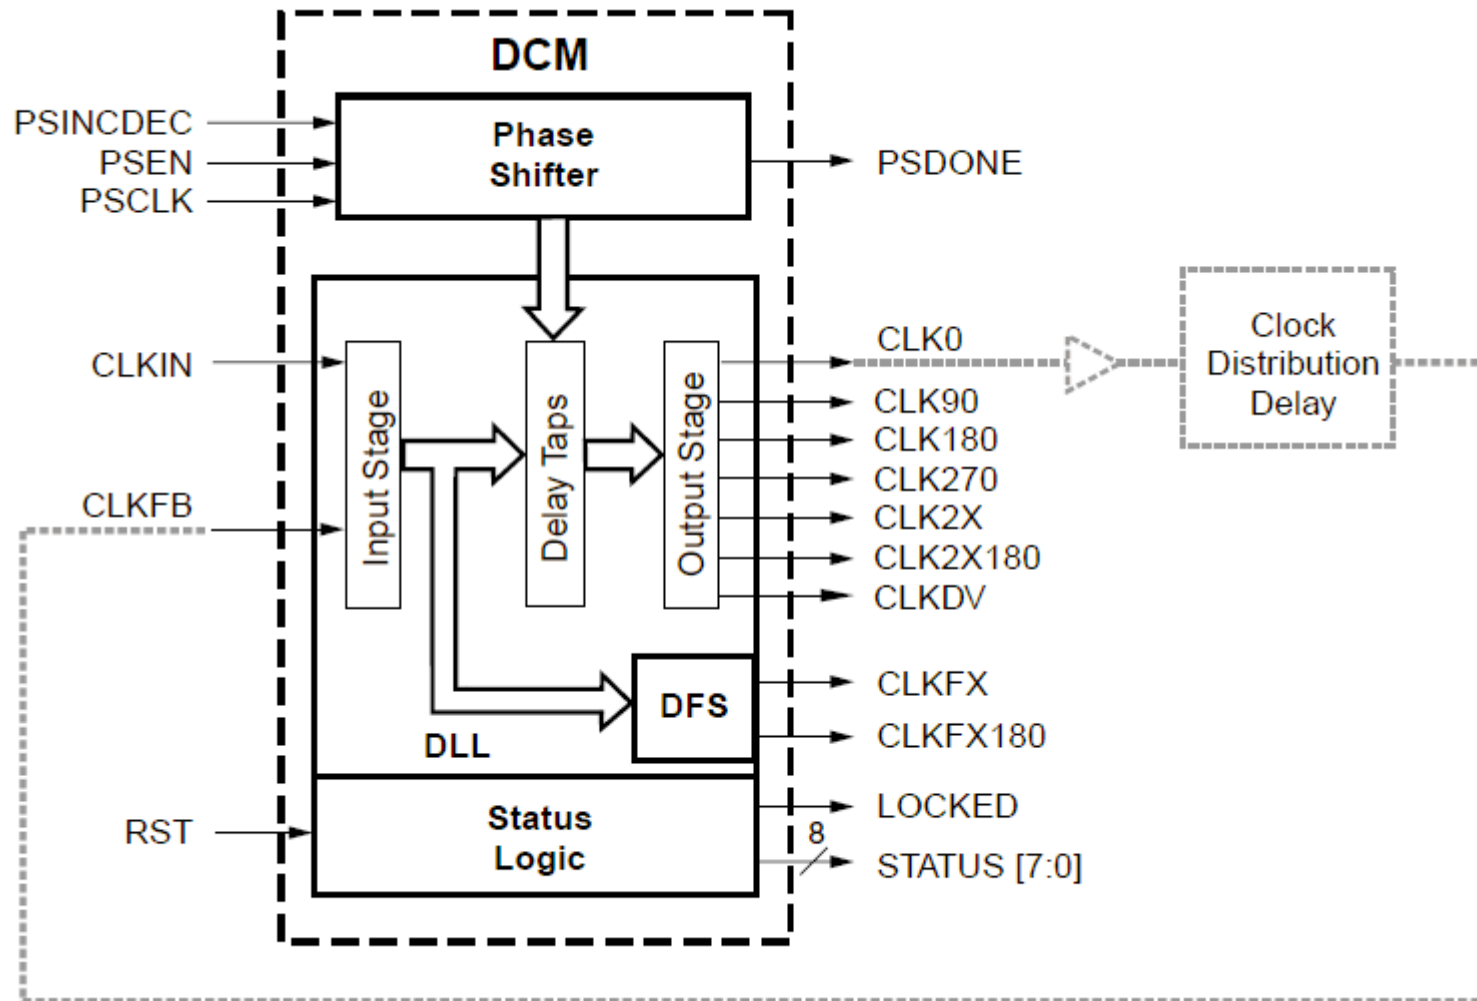


Outline




- Historical introduction.
- Basics of digital design.
- FPGA structure.
- Traditional (HDL) design flow.
- Demo.

Traditional design flow 1/3

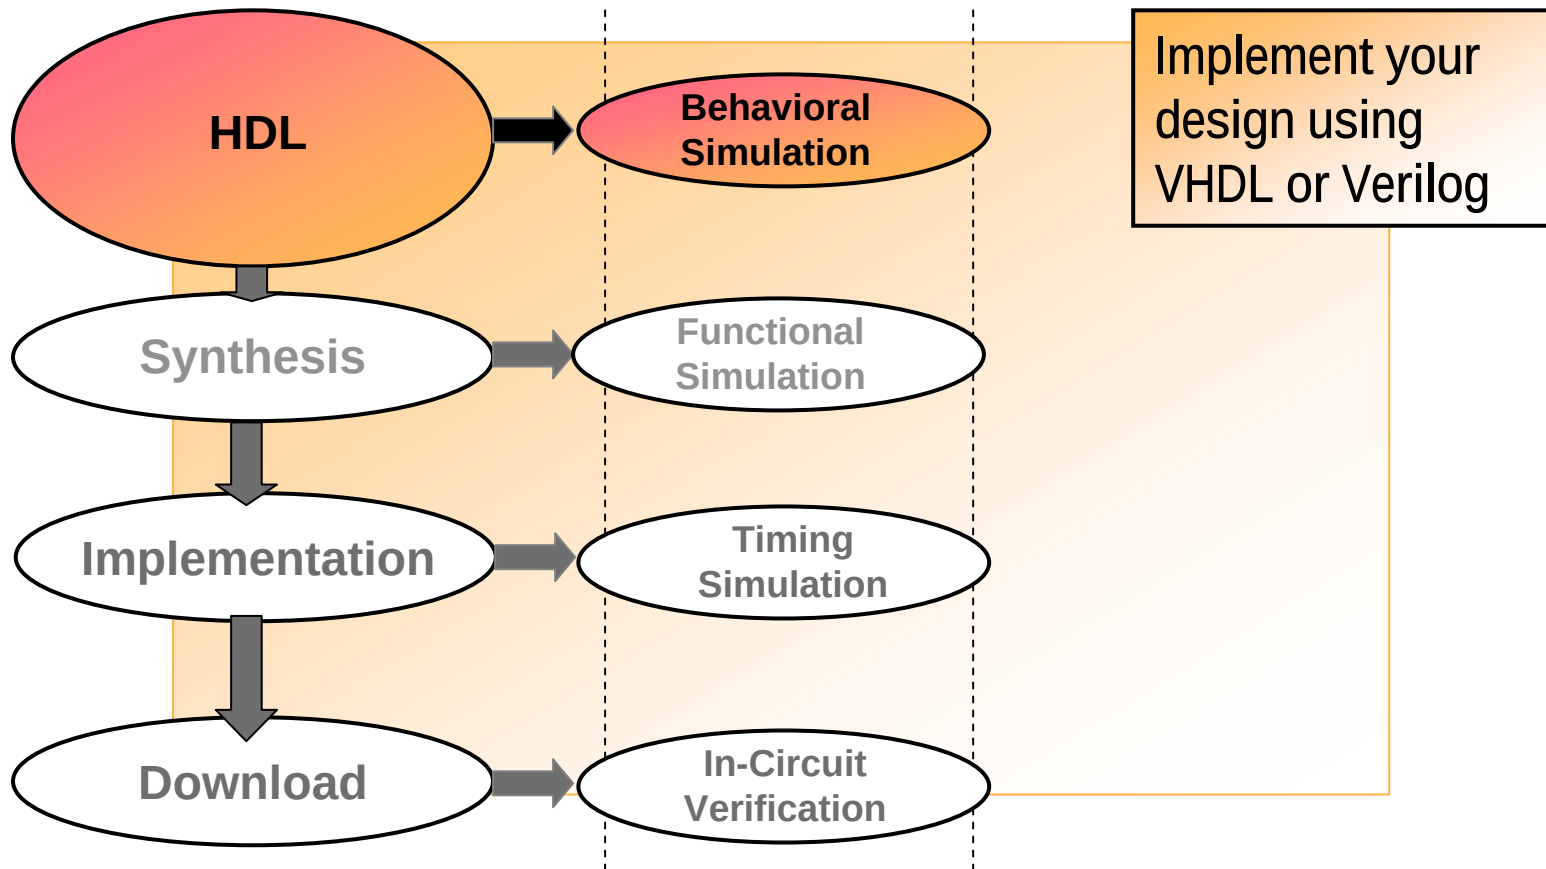

Traditional design flow 2/3

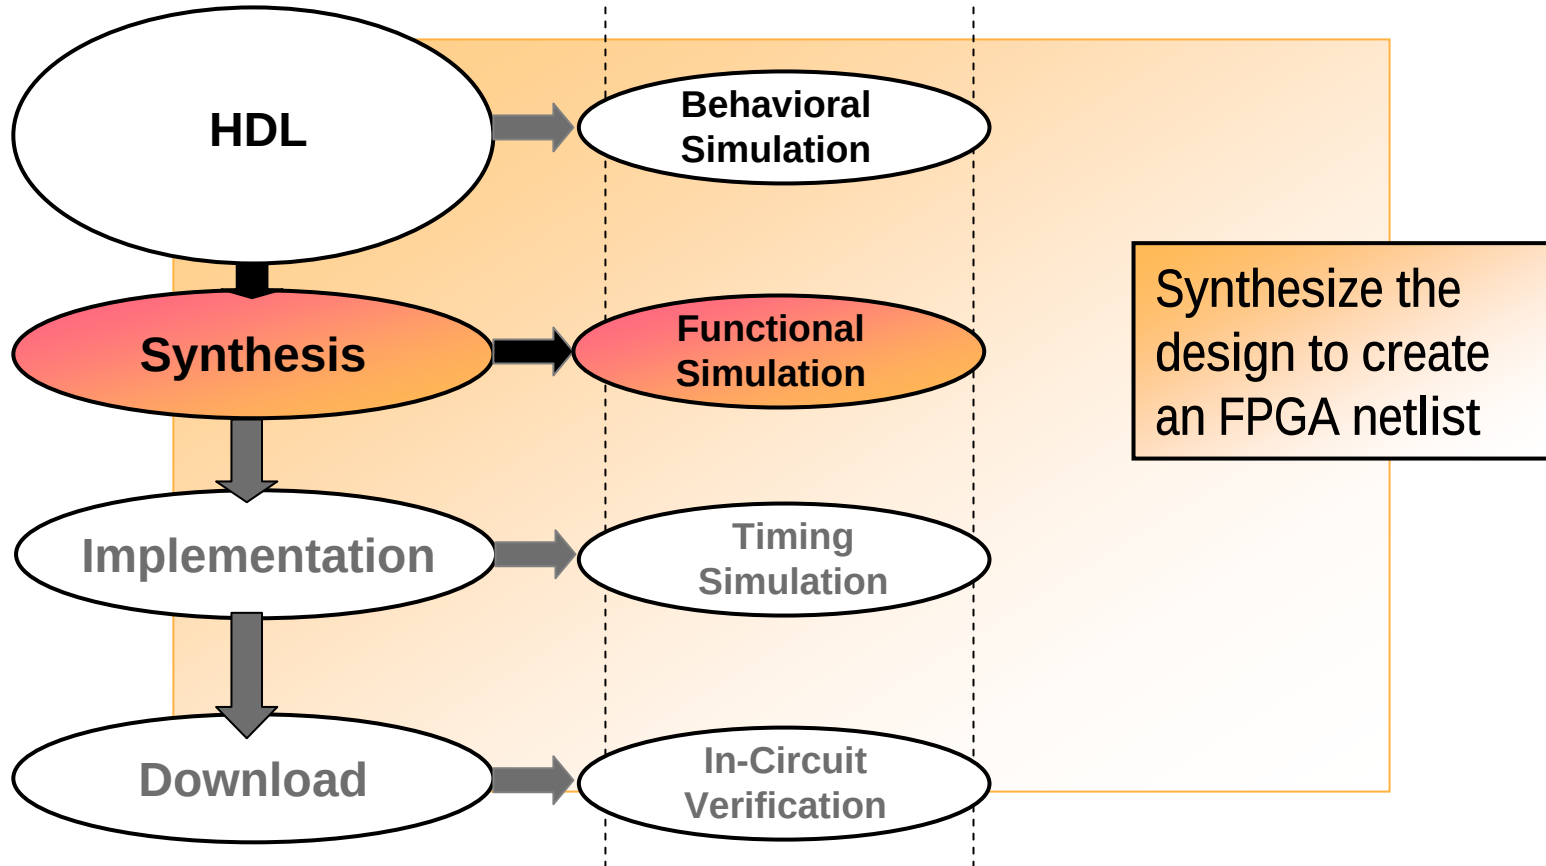

Traditional design flow 3/3

